




Pilot event - PEV

Toni Šibanc
Hahnweide
May 2022



PEV: EVENT settings

TASK PAGE->EDIT->OPTIONS

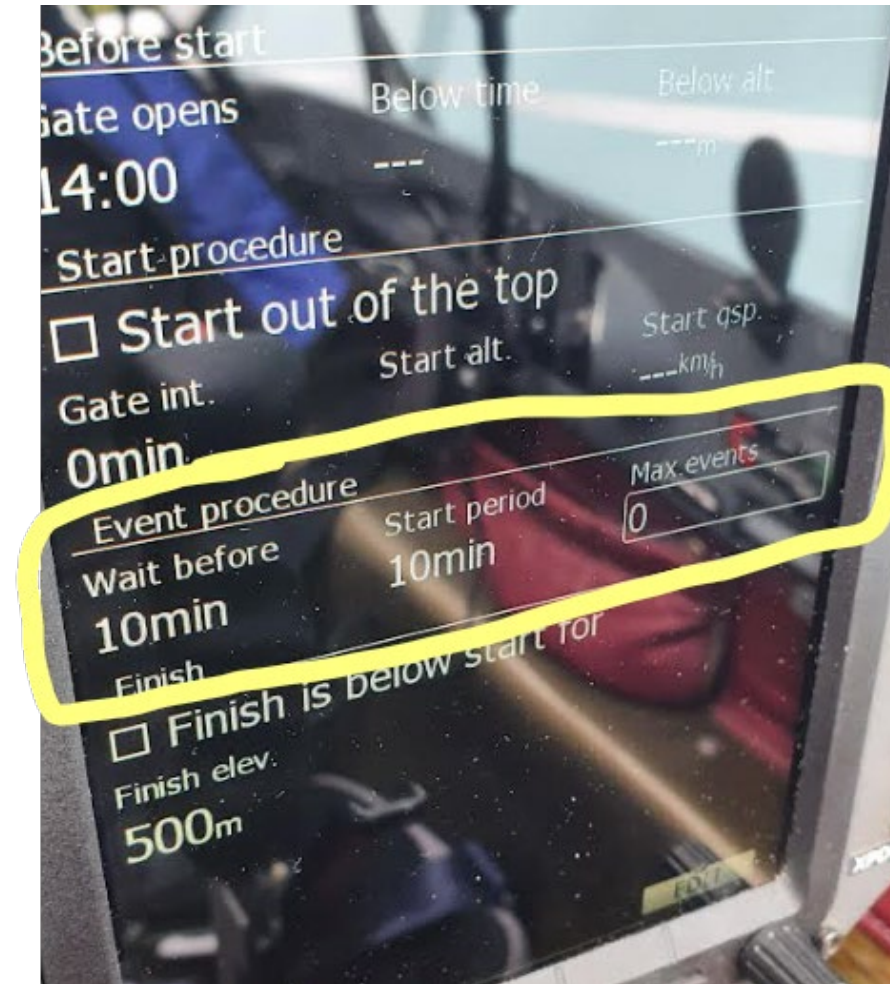




PEV: activation

When ready, press ARM or EVENT

WAIT




START PERIOD

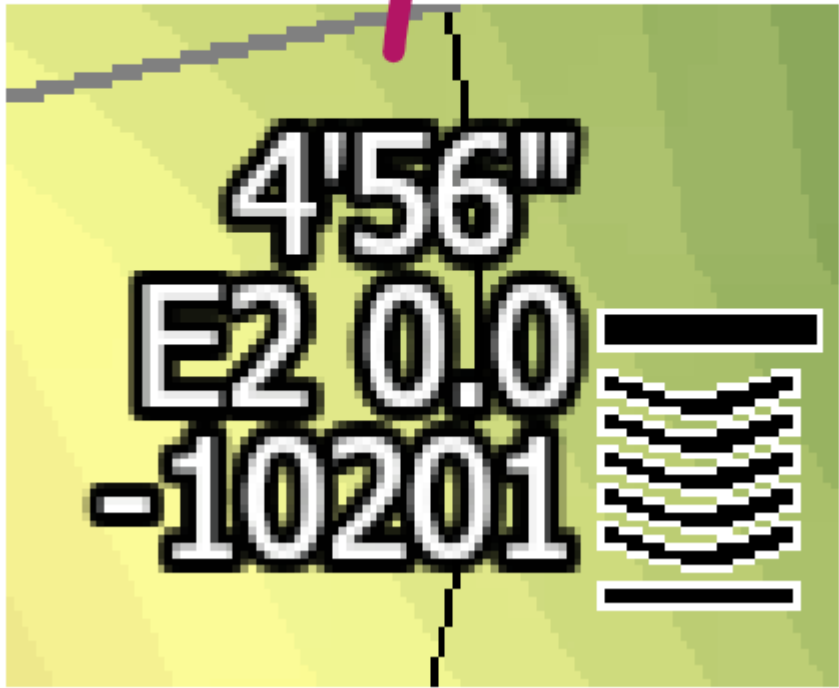

PEV: ARM method

ARM -> It will automatically start when crossing the line

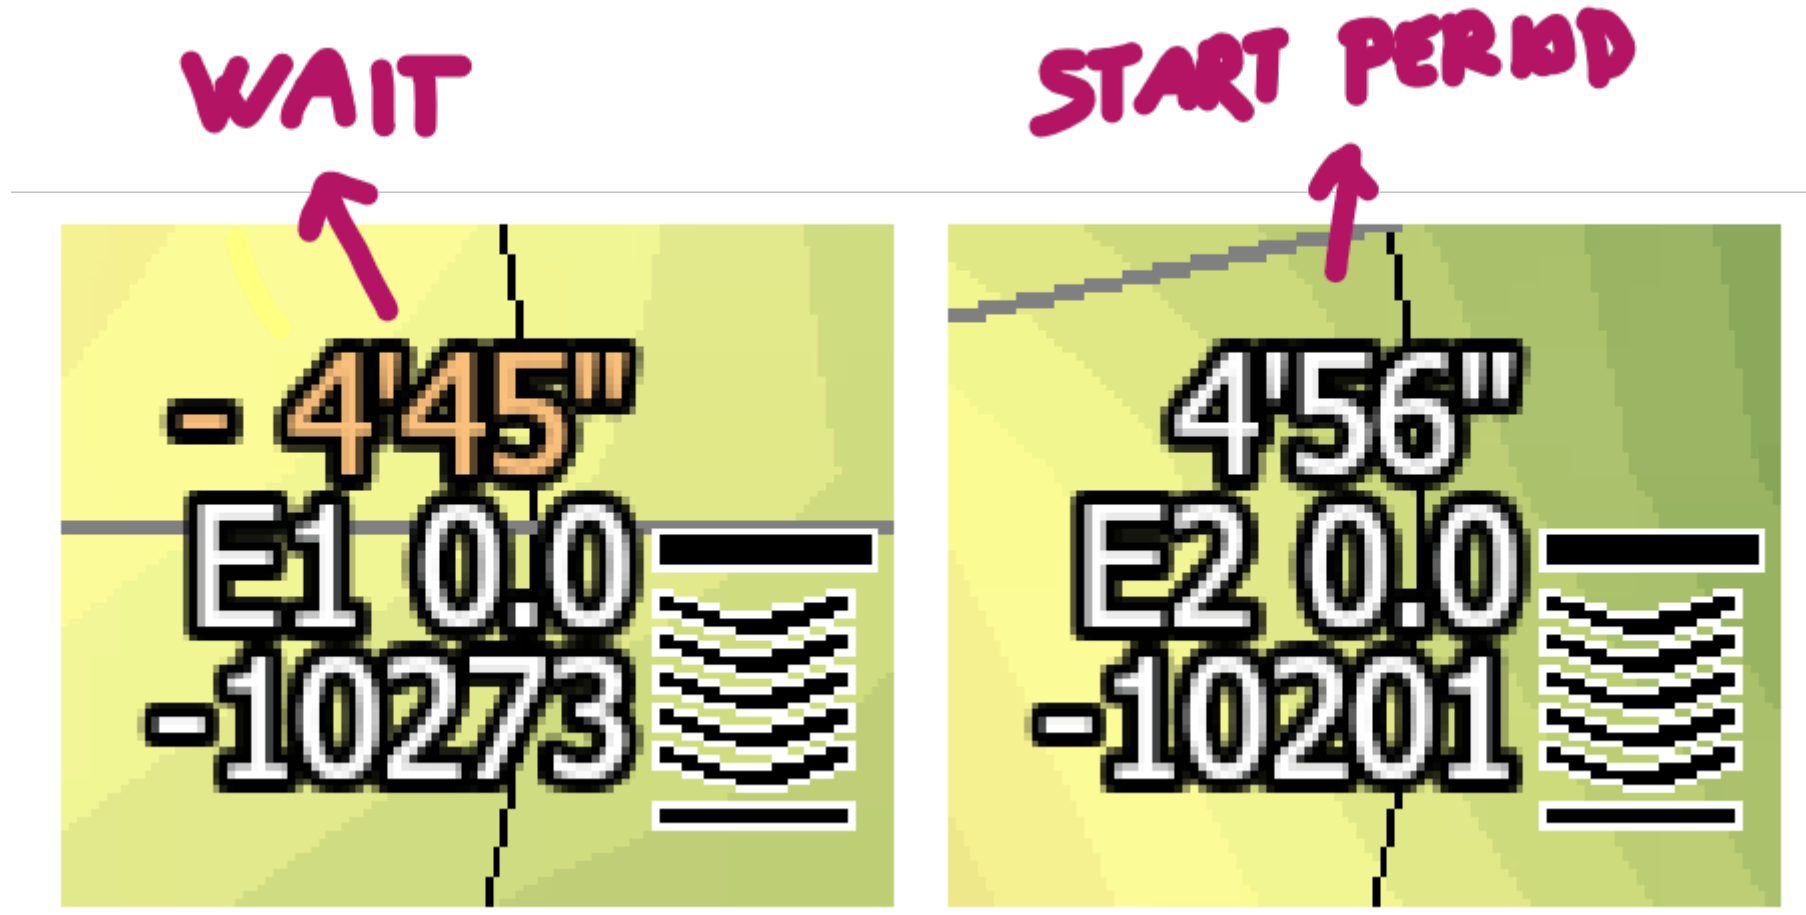



PEV: EVENT method

EVENT -> It will start after confirming the start (you can cross it many times)

WAIT

START PERIOD







PEV: NUMBER OF EVENTS

Number next to letter "E" indicates how many pilot events are already recorded in IGC file.

1st

2nd

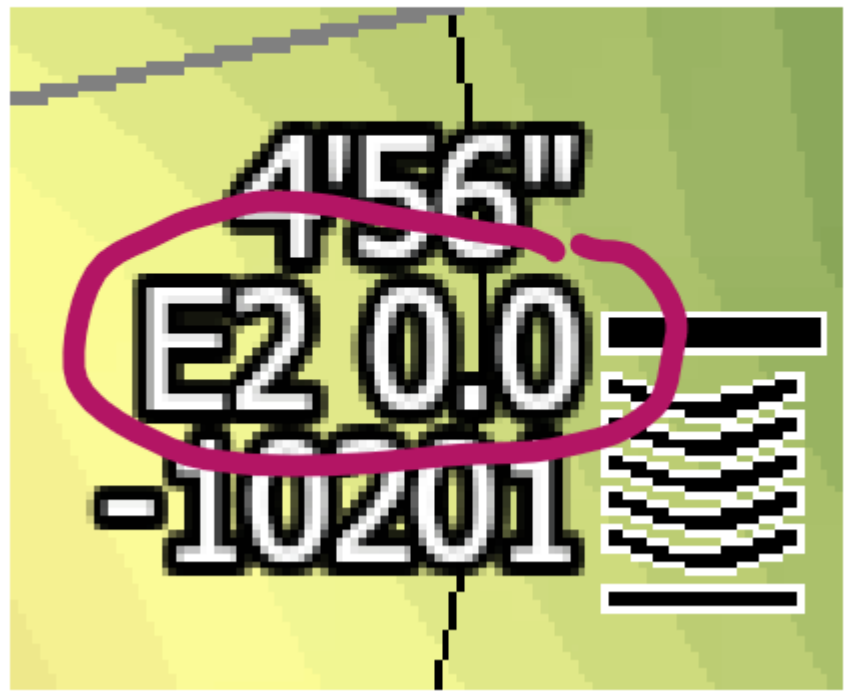

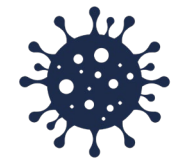

PEV: Timeline example (3x event)



EVENT or ARM is pressed. Wait time countdown started.



EVENT is pressed within 30seconds from previous event. Nothing happend, count down continue and number of events is still one.



EVENT is pressed after 30seconds from first event. Wait time countdown is restarted and events counter is increased.



Wait time period is finished and start window countdown has started. In this window pilot can make a penalty free start.



EVENT is pressed for the third time. Wait time countdown started and events counter is increased to three.



EVENT is pressed for the fourth time. Maximum number of events is exceeded, what is indicated with label max. Start is possible, but penalty points will be applied.

**SUPPORT / INFO /
FOLLOW US**

info@lxnav.com

www.lxnav.com

LXNAV Facebook

LXNAV instagram

